



Ksport Hydraulic Handbrake Installation Instructions

The Ksport Hydraulic Handbrake can be installed in either a vertical or horizontal orientation. The vertical orientation is great for drifting or rally driving, where you need to have minimal hand movement. For cars that see more mild use, the horizontal orientation is preferred because it keeps the handbrake lever out of your way.

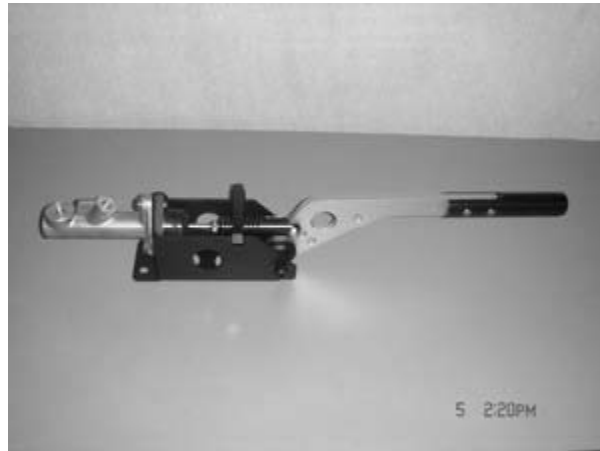


Horizontal

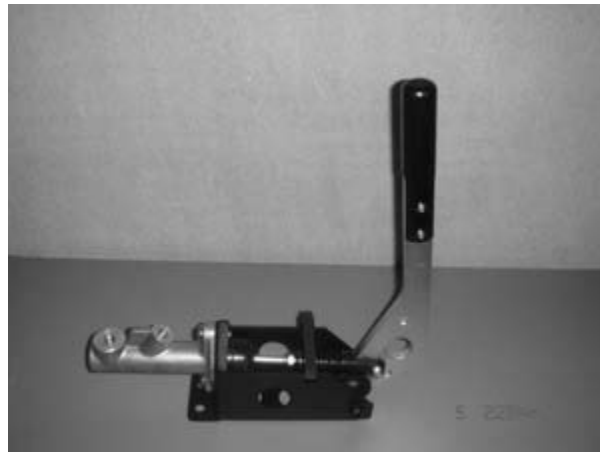

Vertical

Procedure for changing Handbrake Orientation:


1. Remove the silver lock-pin.

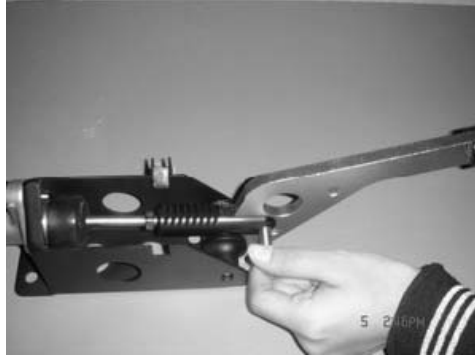


2. Remove the pivot bolt.



3. Turn handle to desired position.

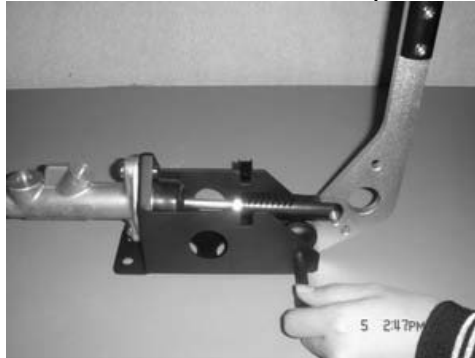

4. Reinstall pivot bolt and lock pin.

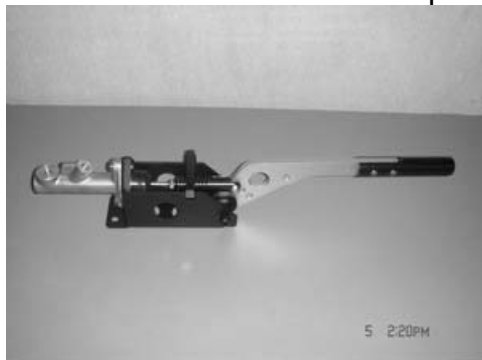

5. Verify tightness.

The Ksport Hydraulic Handbrake is universal, and will fit all vehicles with a hydraulic brake system. The Ksport Hydraulic Handbrake is compatible with DOT 3, DOT 4, and DOT 5 fluids.

Port A is the INLET port.
Port B is the OUTLET port.

